






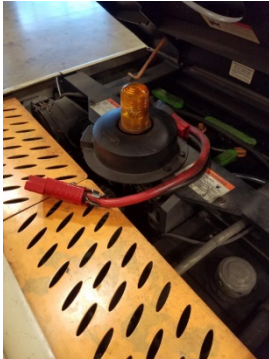


**Picker
Maintenance
cont.**

	<p>Ensure machine is off, raise hood or remove side lid to gain access to battery. Make sure to disconnect battery from machine before servicing the battery.</p>	 					
	<table><tr><th>If...</th><th>Then...</th></tr><tr><td>Machine is equipped with watering system.</td><td><ul style="list-style-type: none">Find the watering system connector and connect it to the watering nozzle that is connected to the hose.Press trigger until the fill indicator stops spinning, once stopped, disconnect hose, wipe off any residue, reconnect battery and close hood.</td></tr><tr><td>Does not have a watering system,</td><td><ul style="list-style-type: none">Remove caps from the top of the battery cells.Water each individual cell, filling it just above the plates of the battery.Once filled, replace all caps, wipe off any residue, reconnect battery, and close hood</td></tr></table>	If...	Then...	Machine is equipped with watering system.	<ul style="list-style-type: none">Find the watering system connector and connect it to the watering nozzle that is connected to the hose.Press trigger until the fill indicator stops spinning, once stopped, disconnect hose, wipe off any residue, reconnect battery and close hood. 	Does not have a watering system,	<ul style="list-style-type: none">Remove caps from the top of the battery cells.Water each individual cell, filling it just above the plates of the battery.Once filled, replace all caps, wipe off any residue, reconnect battery, and close hood 
If...	Then...						
Machine is equipped with watering system.	<ul style="list-style-type: none">Find the watering system connector and connect it to the watering nozzle that is connected to the hose.Press trigger until the fill indicator stops spinning, once stopped, disconnect hose, wipe off any residue, reconnect battery and close hood. 						
Does not have a watering system,	<ul style="list-style-type: none">Remove caps from the top of the battery cells.Water each individual cell, filling it just above the plates of the battery.Once filled, replace all caps, wipe off any residue, reconnect battery, and close hood 						

Contact

Please see your mentor if you have any questions.