

Inflating Tires – Bead Will Not Seal

If the tire does not seal on the tire changer, the HTS/CR-KIT can be used to assist.



**CRITICAL TO
SAFETY**

This process may require two people:

- Use the HTS
- If HTS is unable to seal the bead, the CR-Kit is also available.
- Wear safety glasses and ear protection.
- Remove the valve core in order to increase the air flow through the valve stem.
- Use a quick blast from the CR-Kit while initiating airflow into the assembly.
- Once sealed, transfer the assembly to the inflation cage for final inflation.



**CRITICAL TO
QUALITY**

- Do not allow the CR-KIT to rest on the face of the wheel as it could leave severe scratches.

The Whys

- The release of air from the CR-Kit can be loud and propel loose material from the blast point. Wearing safety glasses and hearing protection reduces the potential effects these have on your eyes and ears.