



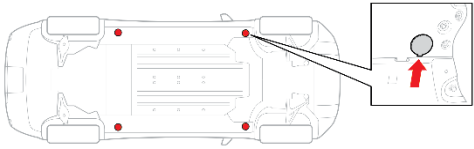








Raising Rivian Vehicles QRG

Purpose To be able to properly and safely lift Rivian vehicles.

Using the Rivian Jack Adapter Follow these steps when lifting Rivian vehicles:

Step	Action
1	Reference the CSL to verify the vehicle will need a jack adapter.
2	<div>Collect the lift adapters and stage them on the tool stand prior to pulling the vehicle into the bay.</div> <div>Note: Only use flat bays and jacks with pads to service the vehicle.</div> <div></div>
3	<div>Once the vehicle has been pulled into the bay, put the vehicle into the highest ride height setting by following these steps:</div> <div><div>1. Go to Drive Modes  in the center display</div><div>2. Select Off-Road All-Terrain </div><div>3. Then select Highest under Ride Height.</div></div>
4	<div>Ensure the automatic suspension adjustments are disabled by following these steps:</div> <div><div>1. Go to Settings  in the center display.</div><div>2. Select Vehicle.</div><div>3. Then select Service.</div><div>4. Turn on Tire Change mode.</div></div>
5	<div>Locate the proper lift points on the undercarriage of the vehicle.</div> <div></div>

Using the Rivian Jack Adapter

Step	Action	
6	Remove the protective cover by applying force to the inner edge.	
7	Place the adapter in the appropriate lift point. Note: If there is debris in the lift point, please remove/clean before inserting adapter; this increases the longevity of the O-ring.	
8	Center jack pad under the adapter and begin to raise vehicle.	
9	Repeat Steps 6 through 9 for the remaining lift points.	
<div>  <div> <p>CRITICAL TO SAFETY</p> <p>When servicing four new tires, lift one side of the vehicle at a time (two people recommended) to ensure even weight distribution.</p> <p>Never enter the zone beneath a lifted vehicle.</p> </div> </div>		
10	Once the service has been completed, lower the vehicle, remove the adapters, and return them to their proper storage location.	
11	<p>Before pulling the vehicle out of the bay, turn off Tire Change mode and return the vehicle to the standard ride height by following these steps:</p> <ol style="list-style-type: none"> Go to Drive Modes  in the center display. Select All-Purpose . Then select Standard under Ride Height. 	