

# TECHNICAL GROUP BULLETIN

**07/08/2019**

## **BALANCERS**

### **FLOOR PLATES & WEIGHT GUARDS**



We have developed a new method of securing the balancer in place and keeping wheel weights from falling under the lift. This will help with weight chasing and costly repairs to the lifts. These attachments will not replace normal housekeeping. Please follow the guidelines for daily maintenance.

- **Floor Plates** are designed to stabilize the balancer and prevent turning during operation while still allowing to tip the balancer back to clean the weights out from underneath. The floor plates will also keep the feet from chipping the concrete, which produces an uneven surface that will cause weight chasing.
- **Weight Guards** help to keep weights from falling under the lift causing damage to the air-lines making the lift inoperable. With the Weight Guard installed, the lifts will be secured to the floor separate from the balancer.

Hunter has been instructed to install the Floor Plates and Weight Guards on all new balancer installs and on existing balancers during scheduled maintenance. For any questions or concerns, please contact Layton Lee @ 480-606-5726