
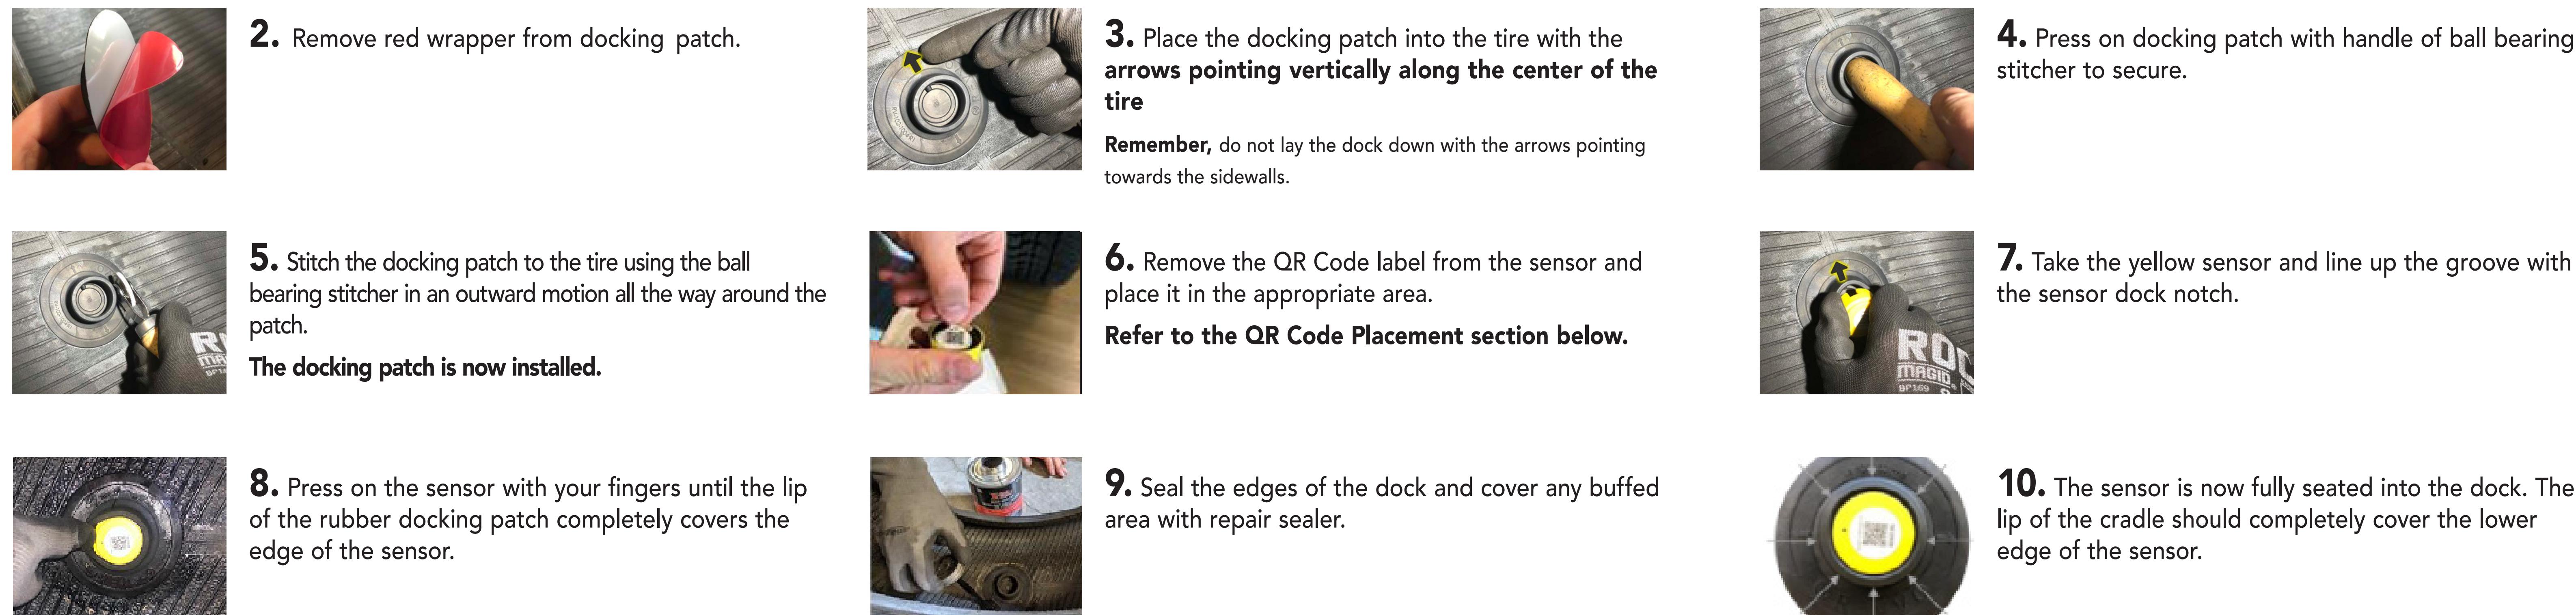


REVVO TIRE SENSOR INSTALLATION PROCESS

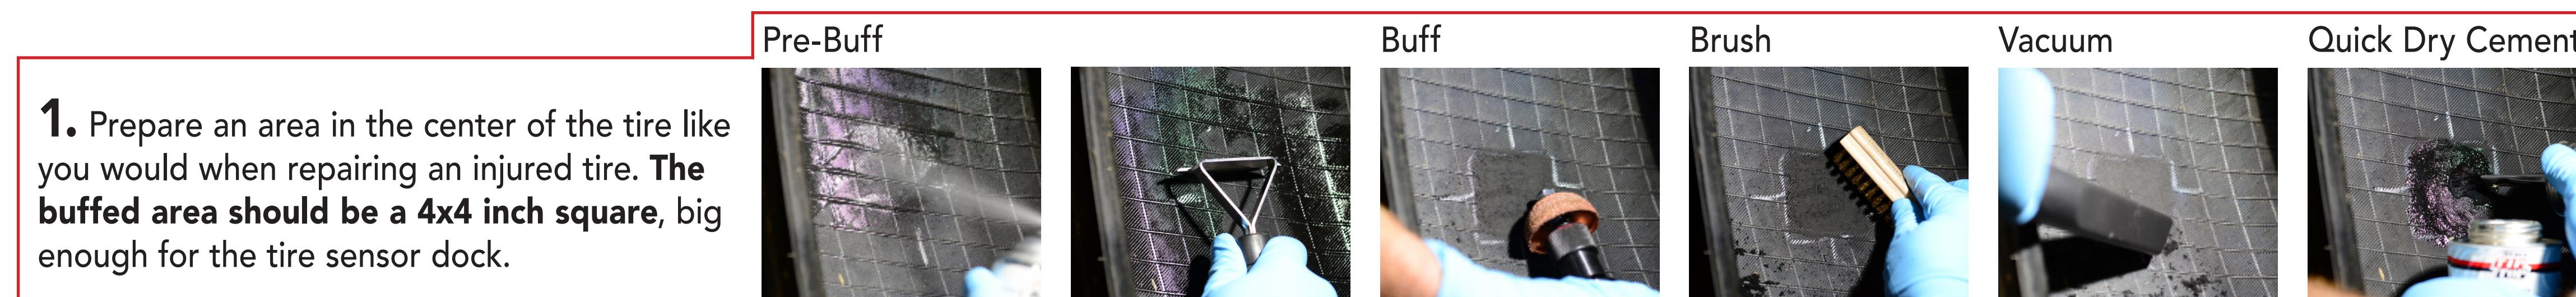

QR Code Placement:


Loose Assemblies:

1. Firmly apply the RTD sticker (orange label) to the loose assembly/carry out tire.
2. Take the QR code label from the sensor and apply it to the RTD label (the orange sticker).



On-Vehicle Servicing:

1. Identify what services are required and if a data sheet is required. If you are doing any of the following, you will need to complete a Revvo data sheet:
 - Initial install of Revvo tire sensor
 - New tire replacement
 - Tire rotation
2. If replacing a tire, transfer the sensor from the old tire to the new tire.
3. If a data sheet is required:
 - Take the QR code label from the sensor and apply it to the Revvo data sheet.

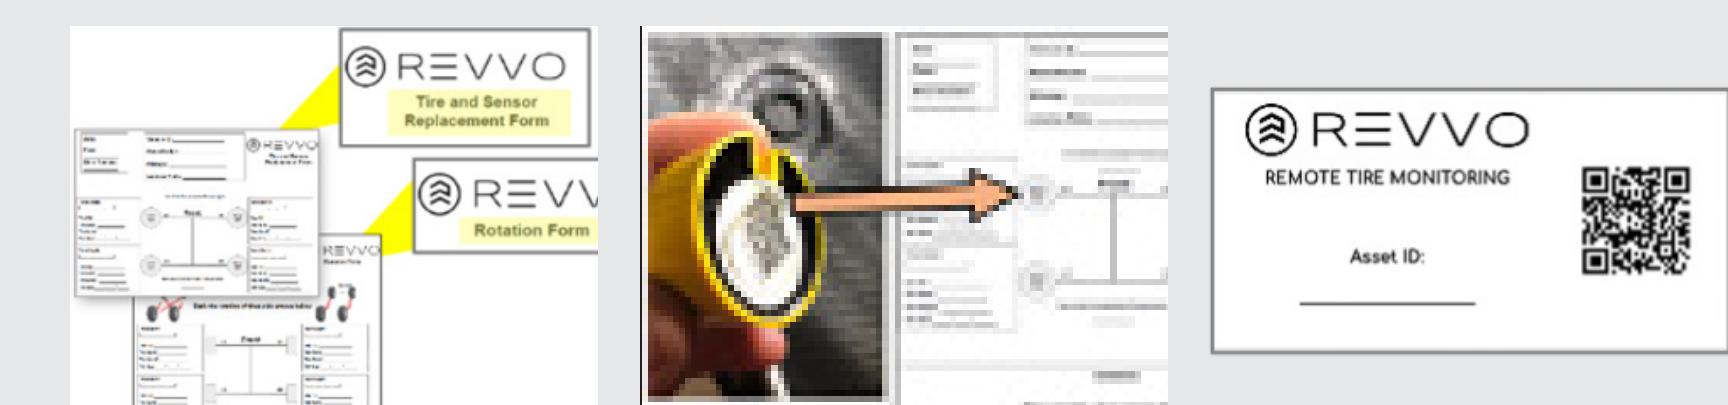

Disconnect air from tool when changing cutter or rasp.

