


Invoice Printer QRG

Loading Paper

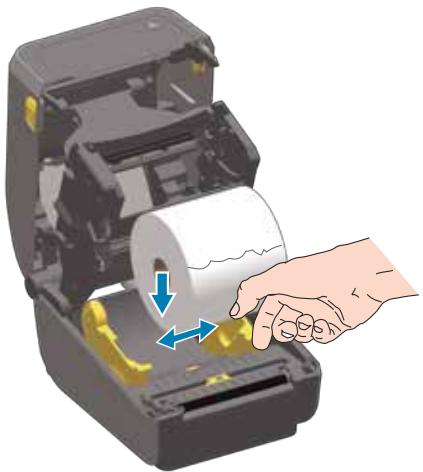

1 Open and place roll on holder




2 Verify easy spin on holder



3 Pull paper past printer front




4 Push the paper under guides

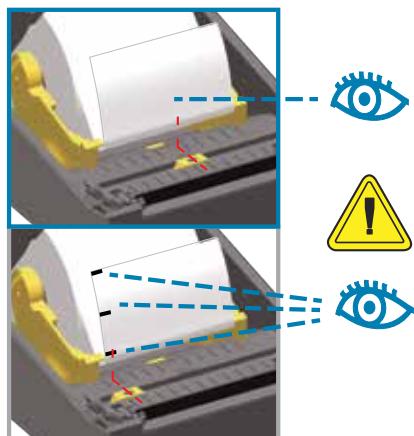

5 Align sensor near center (default) position or to middle of black marks



6 Close the printer

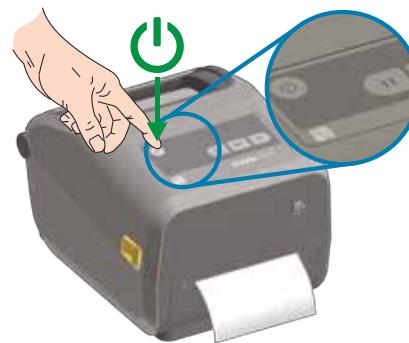

7 Press power and wait as lights cycle



8 Green Status Light ON - Printer Ready