

RETROFIT KIT

**INSTRUCTIONS FOR:
Retrofit countertop
mounted on original
single sales terminal**




888.9 [35"]

FIRST: REMOVE THE ORIGINAL TOP IN THE CENTER SECTION.

SECOND: MOUNT GREY FILLER IN PLACE ON THE EMPLOYEE SIDE


THIRD: MOUNT DECORATIVE RED CAP OVER THE ORIGINAL ON THE CUSTOMER SIDE.

FOURTH: MOUNT THE NEW COUNTERTOP AND DRILL OUT ANY WIRE ACCESS NEEDED FOR CARD SWIPE ETC..

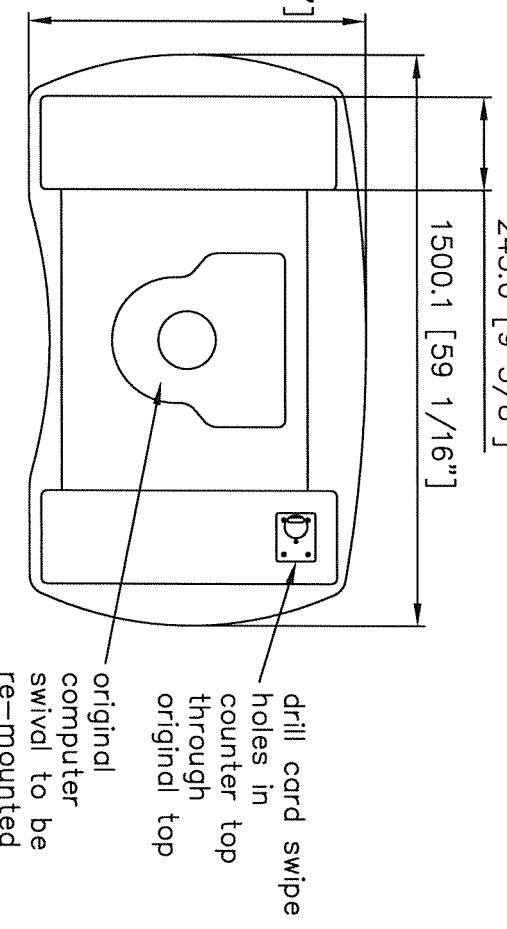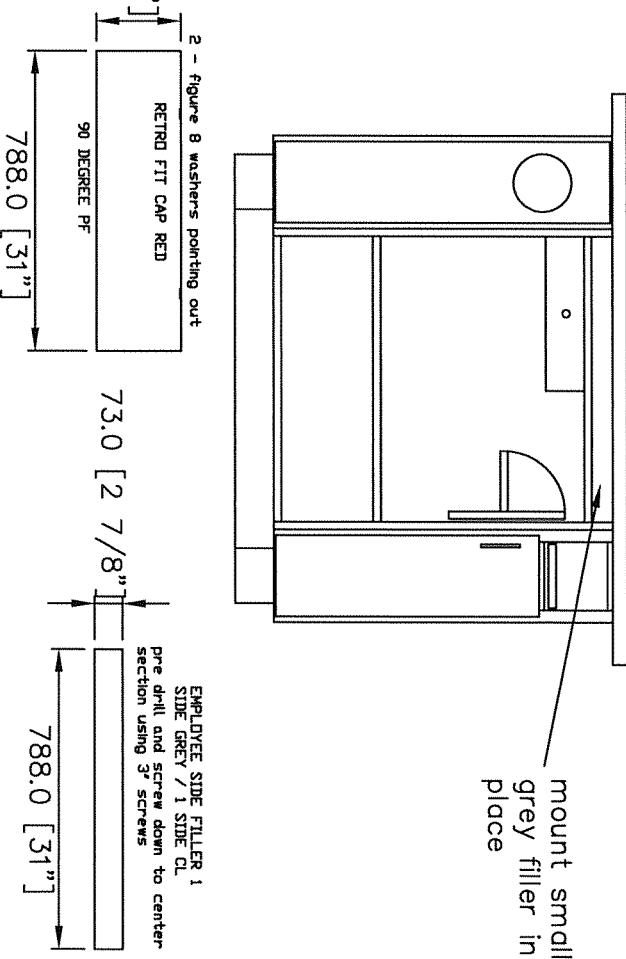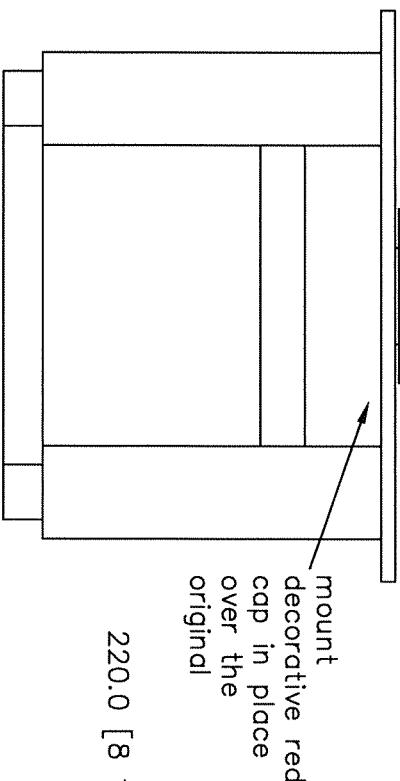


RETRO KIT B

MODIFIED OLDER SINGLE SALES TERMINAL TO BE A DOUBLE SIDE TERMINAL

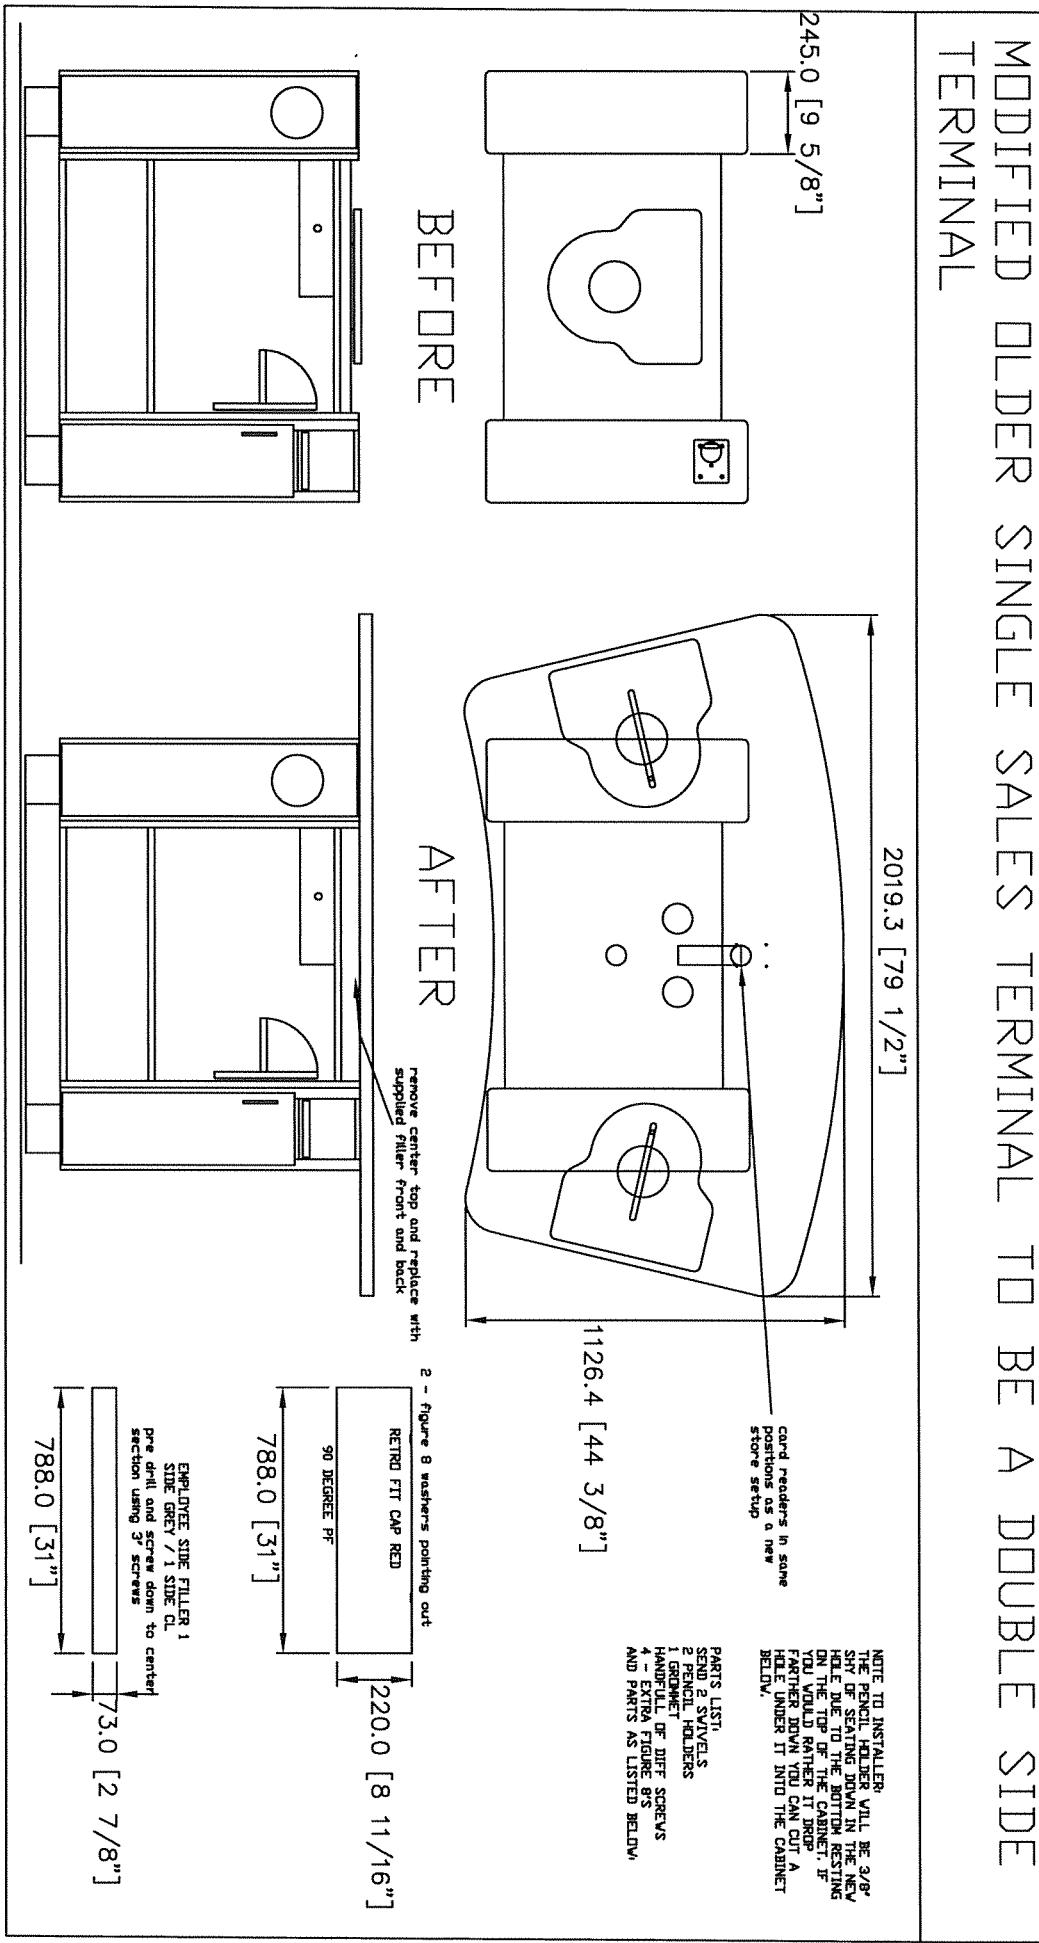


RETRO KIT C

MODIFIED OLDER SINGLE SALES TERMINAL TO BE A DOUBLE SIDE TERMINAL

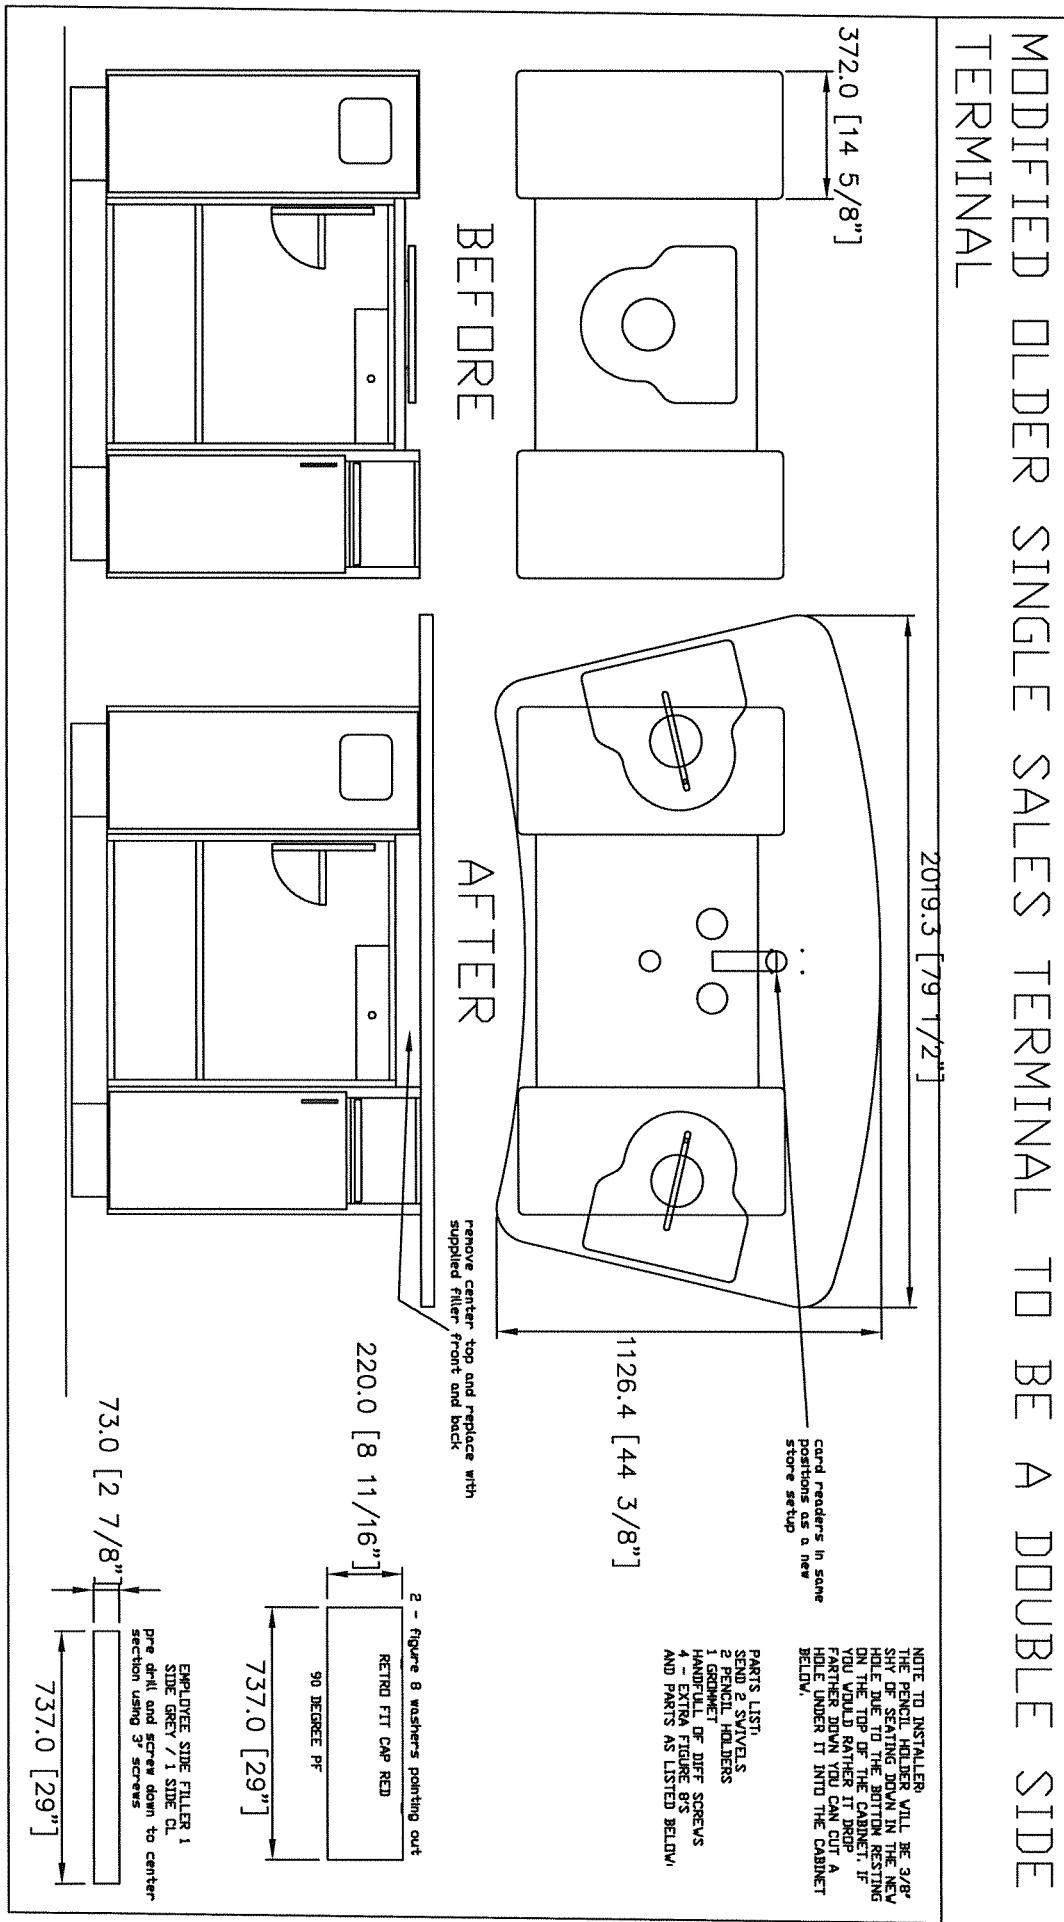


RETRÒ KIT D

MODIFIED OLDER SINGLE SALES TERMINAL TO BE ADA COMPLIANT RIGHT HAND SIDE

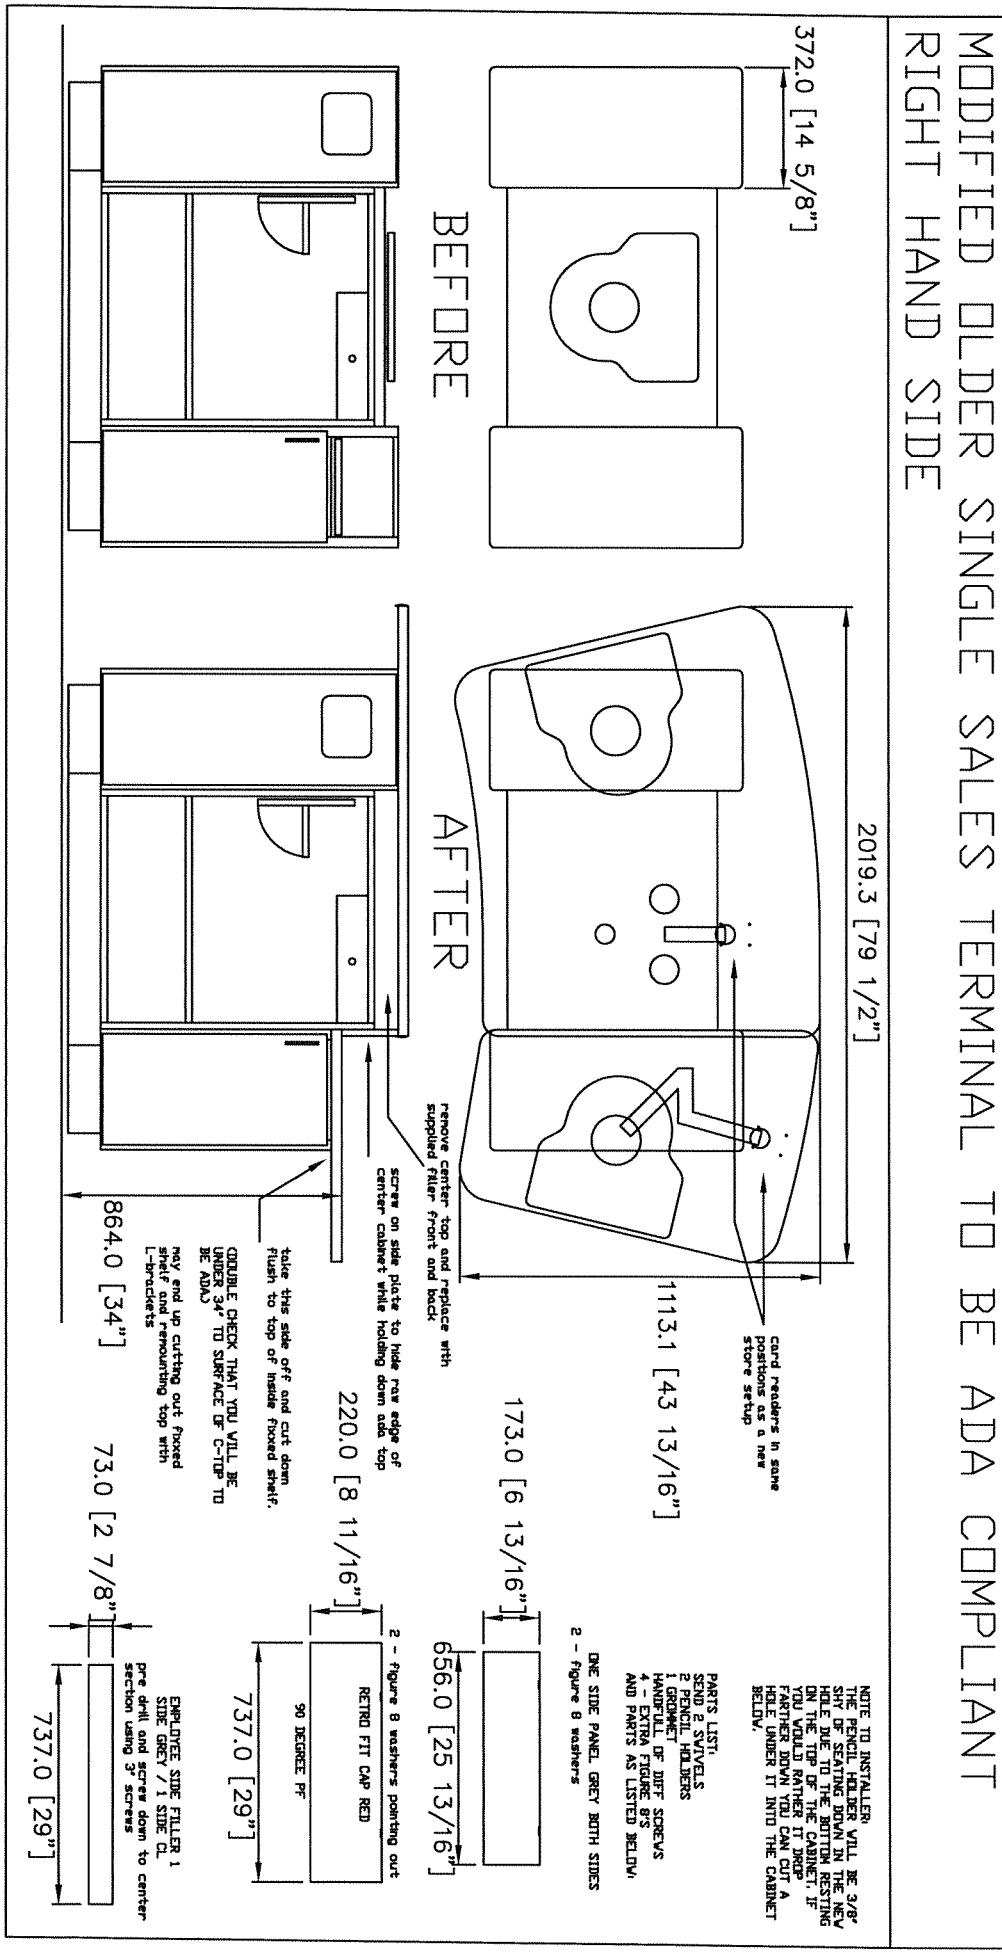

RETRO KIT E

MODIFIED OLDER SINGLE SALES TERMINAL TO BE ADA COMPLIANT RIGHT HAND SIDE

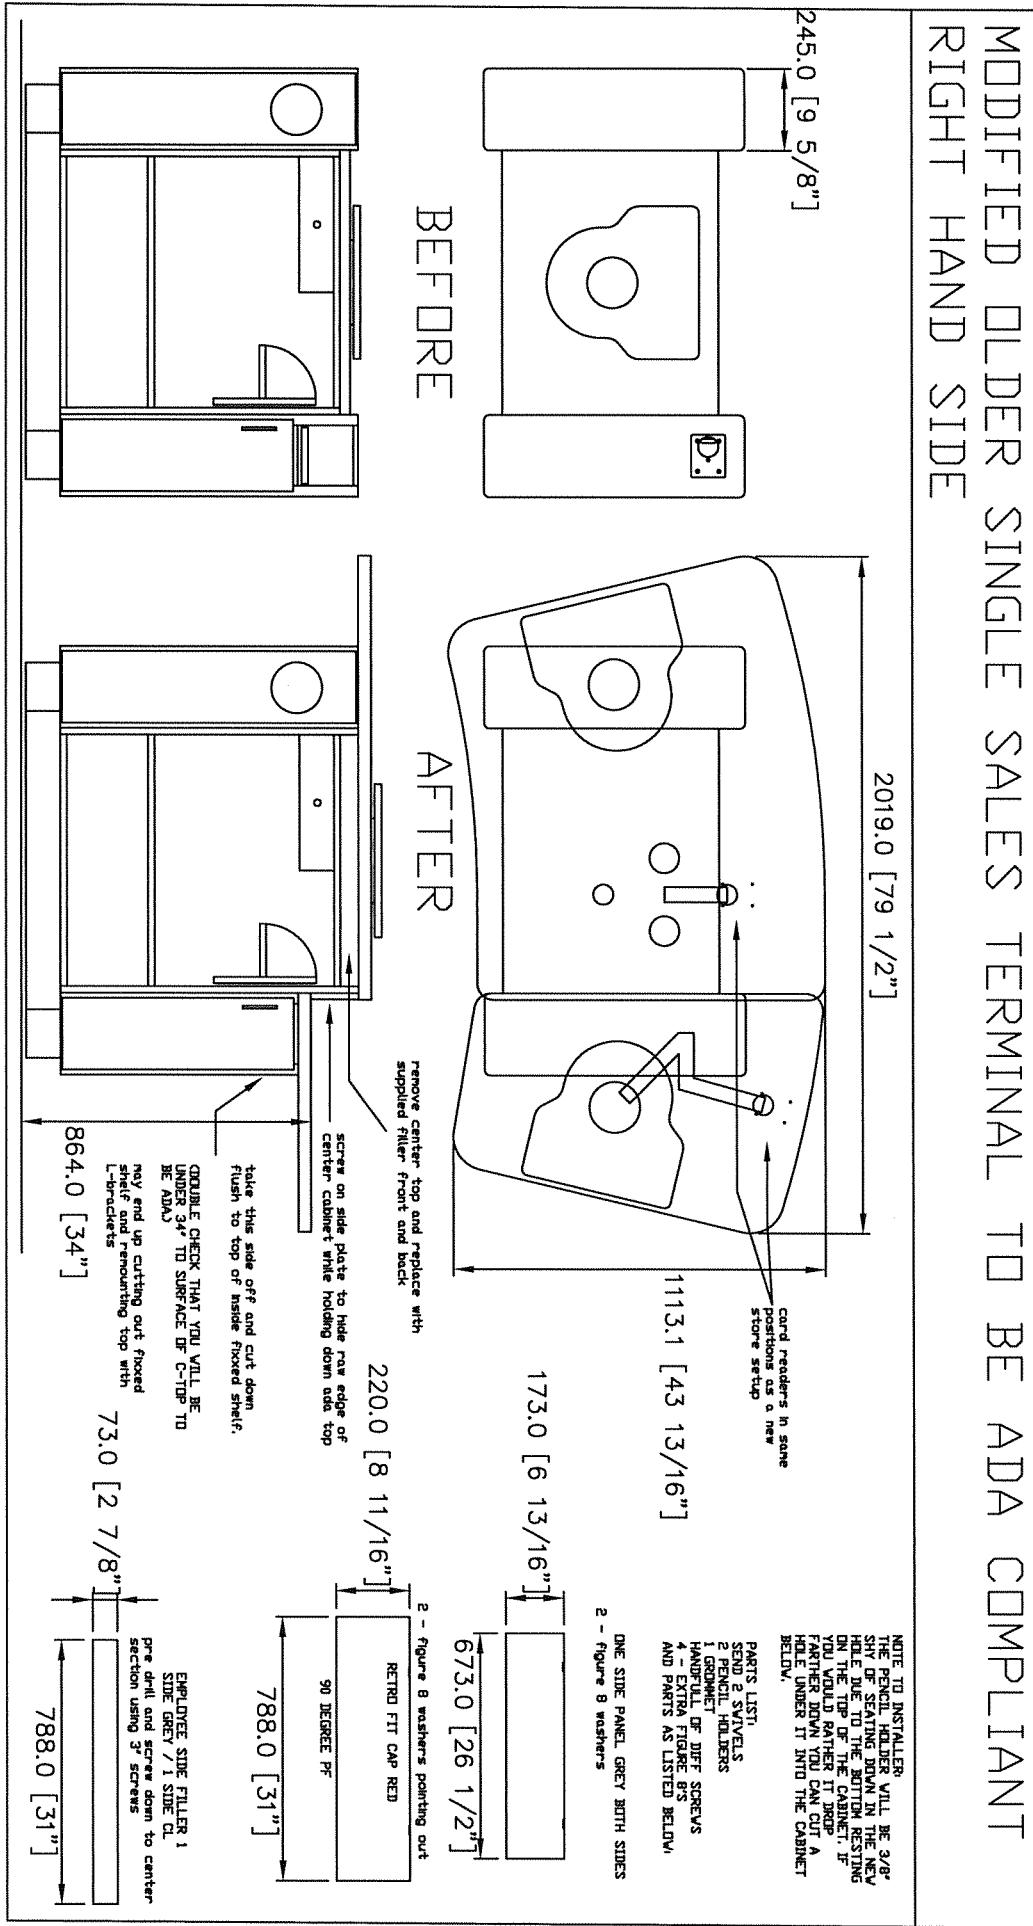

RETROFIT KIT G

MODIFIED OLDER SINGLE SALES TERMINAL TO BE ADA COMPLIANT LEFT HAND SIDE

NOTE TO INSTALLER

THE PENCIL HOLDER WILL BE 3/8" SHY OF SITTING DOWN IN THE NEW HOLE DUE TO THE BOTTOM RESTING ON THE TOP OF THE CABINET. IF YOU WOULD RATHER IT DROPS FARTHER DOWN YOU CAN CUT A HOLE UNDER IT INTO THE CABINET BELOW.

PARTS LIST

1 - SWIVELS
2 - PENCIL HOLDERS
1 - GROMMET
1 - HAMMER (IF DIRT SCREWS)
4 - EXTRA FIGURE 8'S
AND PARTS AS LISTED BELOW:

2 - ONE SIDE PANEL GREY BOTH SIDES

2 - Figure 8 washers

2019.3 [79 1/2"]

372.0 [14 5/8"]

core readers in same
positions as a new
store setup

1113.1 [43 13/16"]

173.0 [6 13/16"]

656.0 [25 13/16"]

2 - Figure 8 washers pointing out

remove center top and replace with
supplied Filler

220.0 [8 11/16"]

screen on side plate to hide raw edge of
center cabinet while holding down side top

take this side off and cut down shelf
flush to top of inside fixed shelf

DOUBLE CHECK THAT YOU WILL BE
ADA

EMPLOYEE SIDE FILLER 1
SIDE GREY / 1 SIDE GL
pre drill and screw down to center
section using 3" screws

737.0 [29"]

73.0 [2 7/8"]

864.0 [34"]

AFTER

BEFORE