

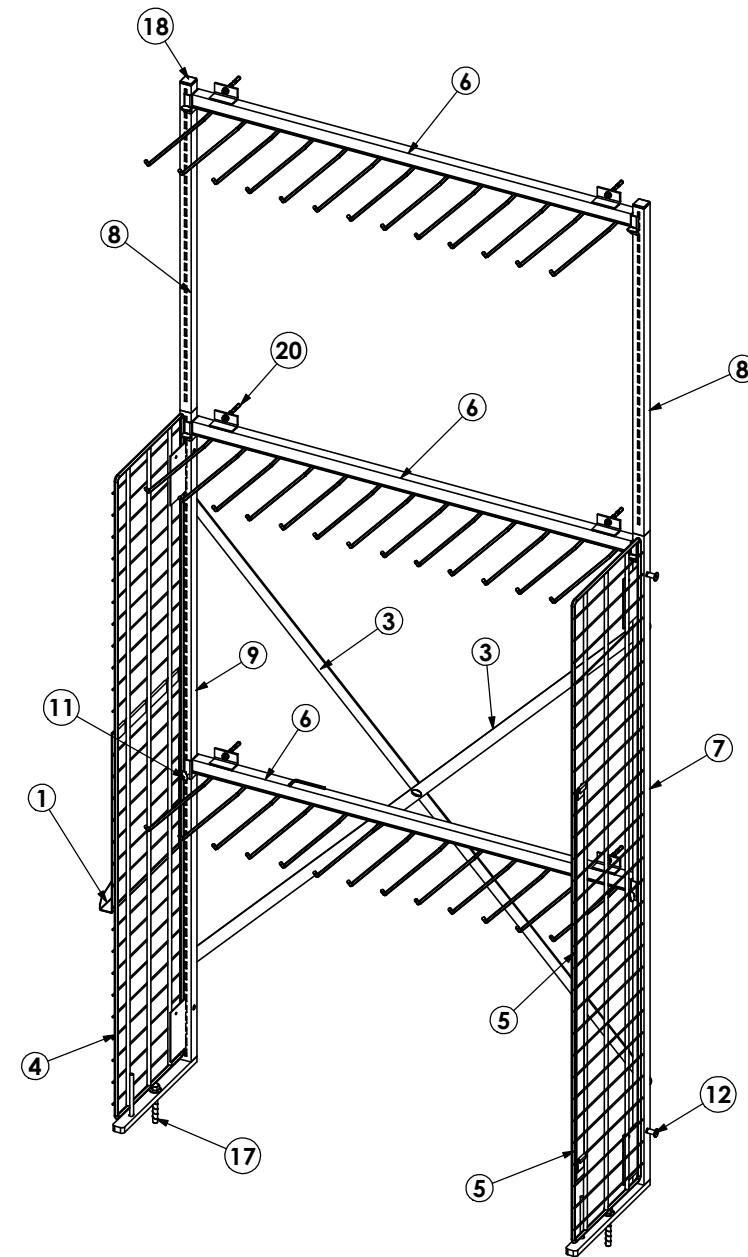


ITEM	PART NO	QTY	DESCRIPTION
1	30-3000566	1	MAT HOLDER ASSEMBLY
2	30-3000570	1	RULER HOLDER
3	30-3000578	2	SUPPORT BAR
4	30-6000274	1	LH WING ASSEMBLY
5	30-6000276	1	RH WING ASSEMBLY
6	30-6000277	3	HOOK RACK
7	30-8000392	1	RH LEG ASSEMBLY
8	30-8000393	2	EXTENSION
9	30-8000394	1	LH LEG ASSEMBLY
10	0G-46044	1	RULER POS STRIP
11	02-00062	7	THUMB SCREW 1/4-20 X 1/2" ZC
12	02-00405	2	NUT JC 1/4-20 BLK
13	02-00497	10	1/4-20X1 PNHD PHL BLK
14	02-10004	6	NUT 1/4-20 BLK
15	02-10006	1	HEX NUT 1/4-20 ZC
16	02-20066	2	BOLT JCB 1/4-20X45MM BLK
17	02-20076	2	BOLT ANCHOR 3/8" X 3" CONCRETE
18	02-40086	2	CAPLUG 1" SQ 14-20GA BLK
19	02-50445	1	HEX KEY 5/32"
20	02-52008	6	STUD ANCHOR FOR BLOCK AND BRICK

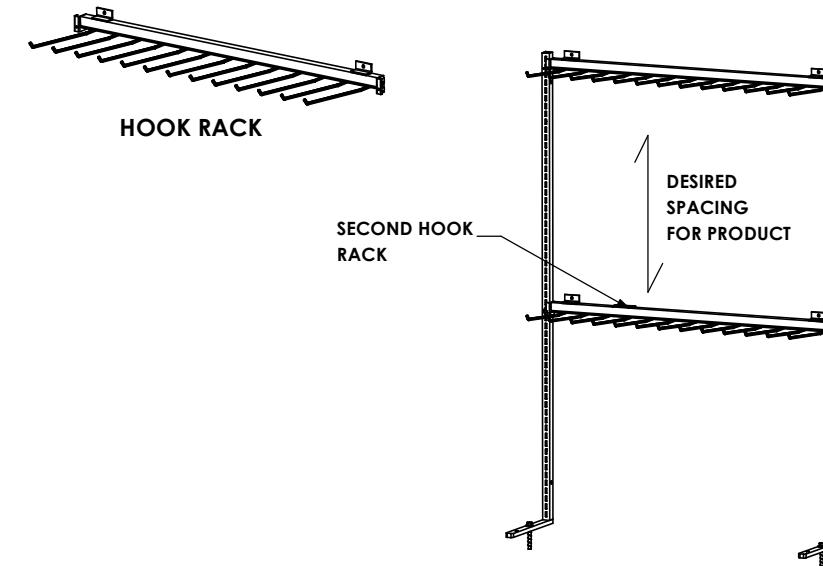

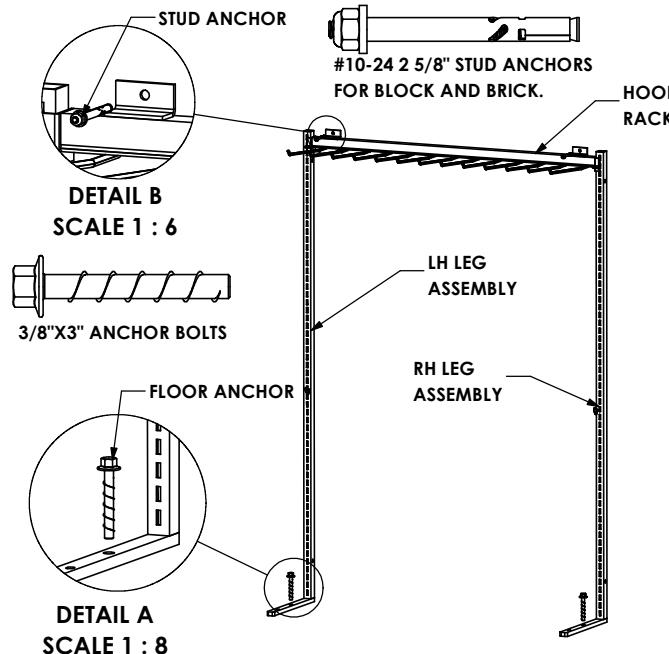


STEP1:

SET THE RH AND LH LEG ASSEMBLIES AND 1ST HOOK RACK BAR IN THE DESIRED PLACE AND SECURE TO THE FLOOR WITH PROVIDED 3/8"X3" ANCHOR BOLTS AND TO THE WALL WITH PROVIDED #10-24 2 5/8" STUD ANCHORS FOR BLOCK AND BRICK. USE PROVIDED THUMB SCREWS TO GIVE THE RACK A SNUG FIT ON THE LEGS.


STEP2:

SET THE SECOND HOOK RACK IN THE DESIRED LOCATION ON THE LEG ASSEMBLIES WITH THE NEEDED SPACING. USE PROVIDED THUMB SCREWS TO GIVE THE RACK A SNUG FIT ON THE LEGS.

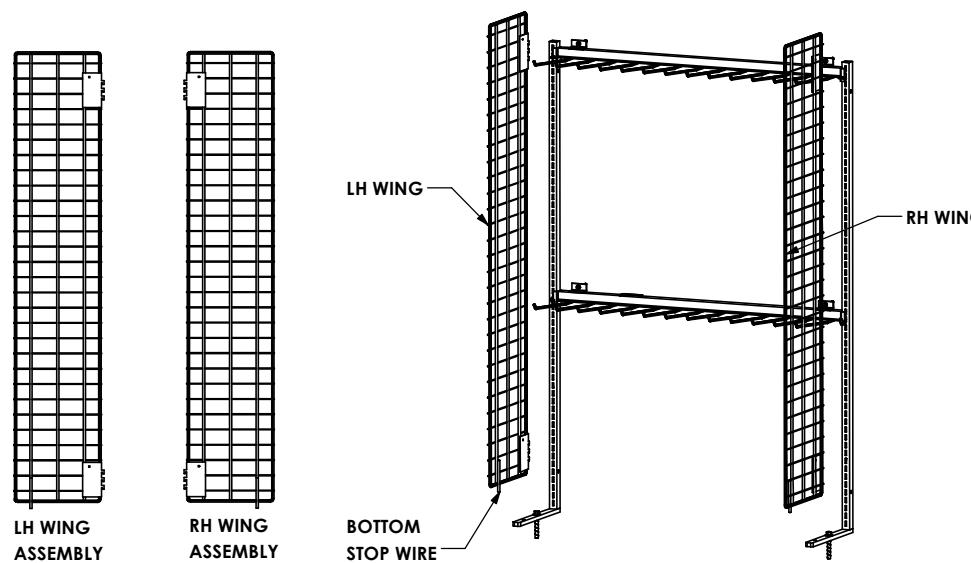

STEP3:

SET THE WING ASSEMBLIES THE LH AND RH WITH THE THIN WIRE GRID TO THE OUTSIDE AND BOTTOM STOP WIRE TO THE INSIDE.

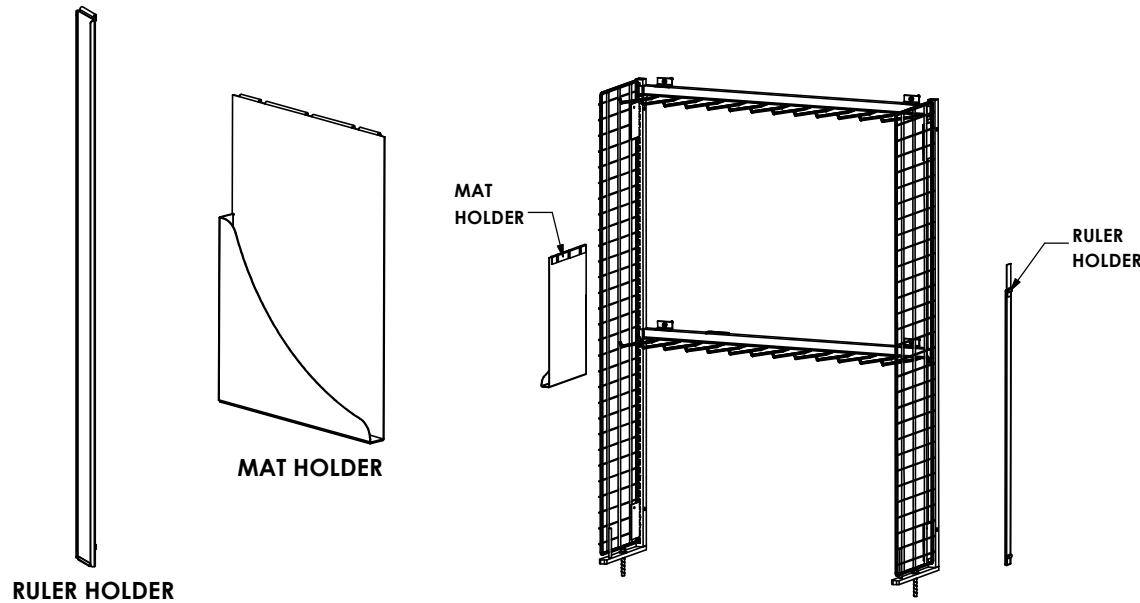

RULER HOLDER

MAT HOLDER

MAT HOLDER

RULER HOLDER


STEP4:

FINISH THE INSTALL BY HANGING THE MAT HOLDER ON THE OUTSIDE OF THE LEFT WING GRID AND THE RULER HOLDER WITH RULER GRAPHIC ON THE OPPOSITE GRID.

FREE STANDING UNIT NOT AGAINST A WALL (SUPPORT BAR INSTALLATION)

STEP:

IF RACKS ARE NOT GOING TO BE SECURED TO A WALL AND ONLY FLOOR MOUNTED REAR SUPPORT BARS ARE REQUIRED. TWO SUPPORT BARS CROSSED ON THE BACK ARE SECURED WITH 1/4-20 BLK PH SCREWS WITH A 1/4-20 THUMB SCREW AND NUT TO SECURE BARS TO EACH OTHER AT THE CENTER.

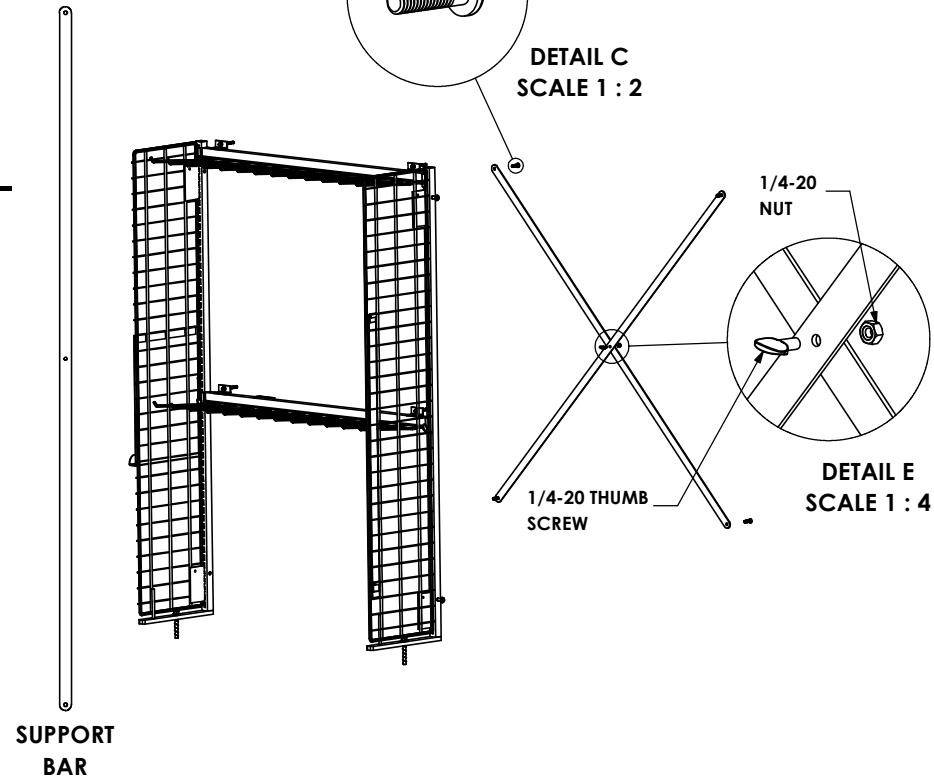

SUPPORT
BAR

1/4-20 BLK PH
SCREWS

DETAIL C
SCALE 1 : 2


1/4-20
NUT

DETAIL E
SCALE 1 : 4

1/4-20 THUMB
SCREW



NOTE:

FOLLOW THESE STEPS IF ADDING THE PROVIDED EXTENSIONS

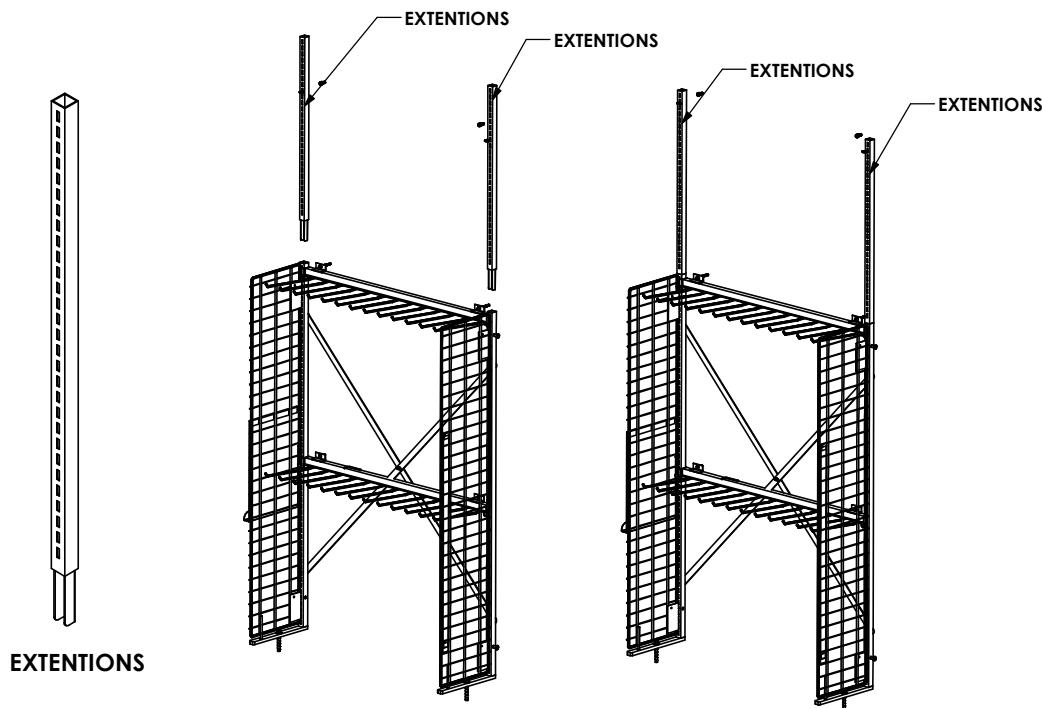


STEP1:

INSERT PROVIDED EXTENTIONS INTO THE TOP OF THE LEFT AND
RIGHT LEG ASSEMBLIES.

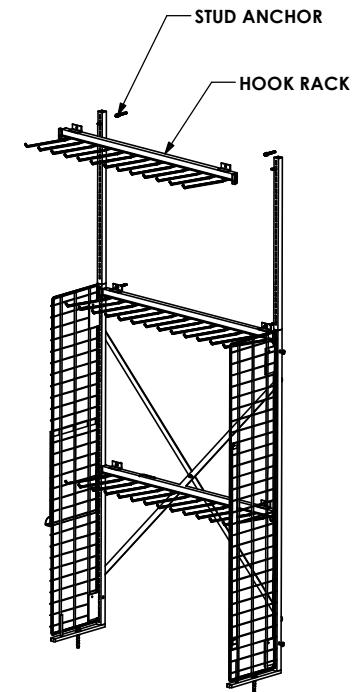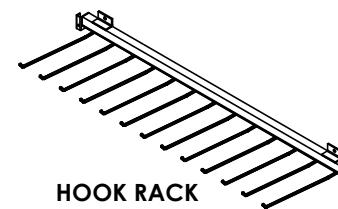

STEP2:


SET THE HOOK RACK IN THE DESIRED LOCATION ON THE EXTENTIONS WITH THE NEEDED
SPACING. USE PROVIDED THUMB SCREWS TO GIVE THE RACK A SNUG FIT ON THE
EXTENTIONS. USE PROVIDED 1/4" WALL ANCHORS TO SECURE TO WALL.

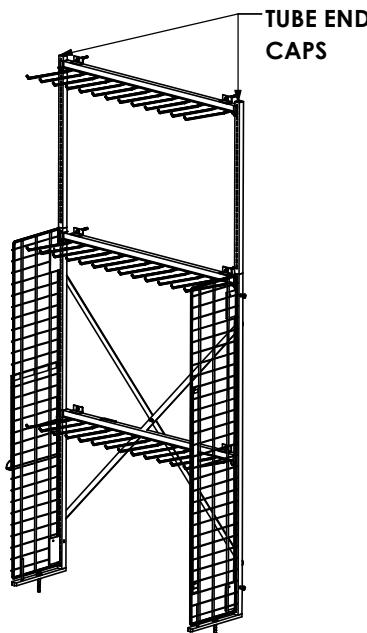


STEP3:

FINISH THE EXTENSION INSTALL BY PLACING
TUBE END CAPS IN THE TOP OF THE EXTENTIONS

ITEM	PART NO	QTY	DESCRIPTION
1	3R-8000391	2	WIPER DISPLAY RACK
2	02-00405	2	NUT JC 1/4-20 BLK
3	02-20066	2	BOLT JCB 1/4-20X45MM BLK

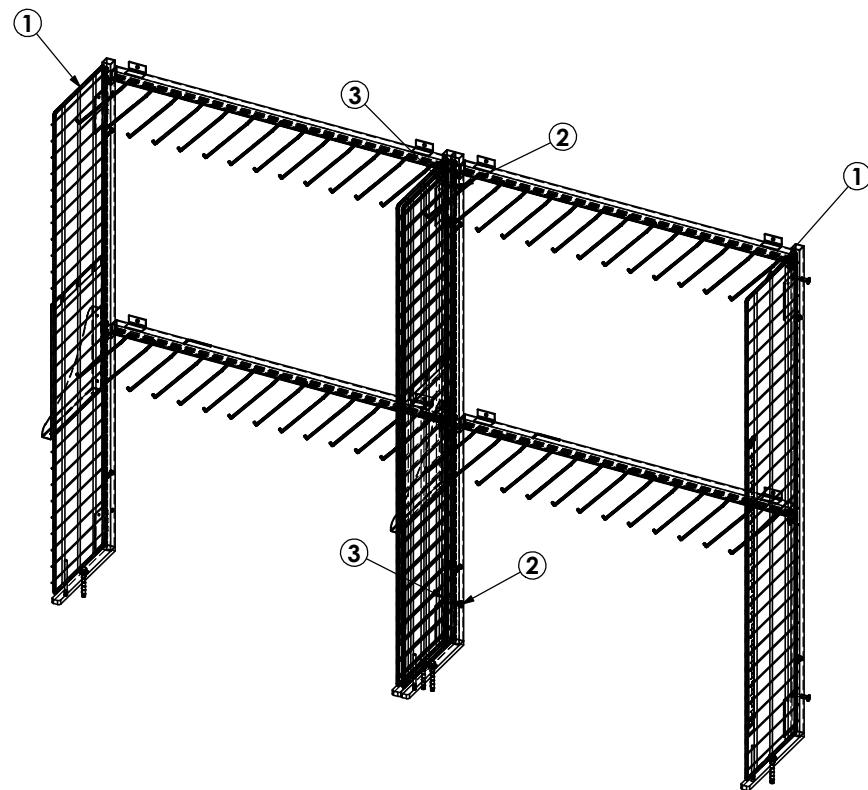

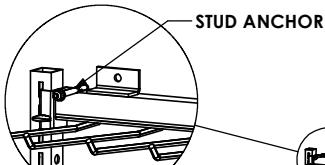


DETAIL A
SCALE 1 : 8



3/8"X3" ANCHOR BOLTS

FLOOR ANCHOR

3/8"X3" ANCHOR BOLTS

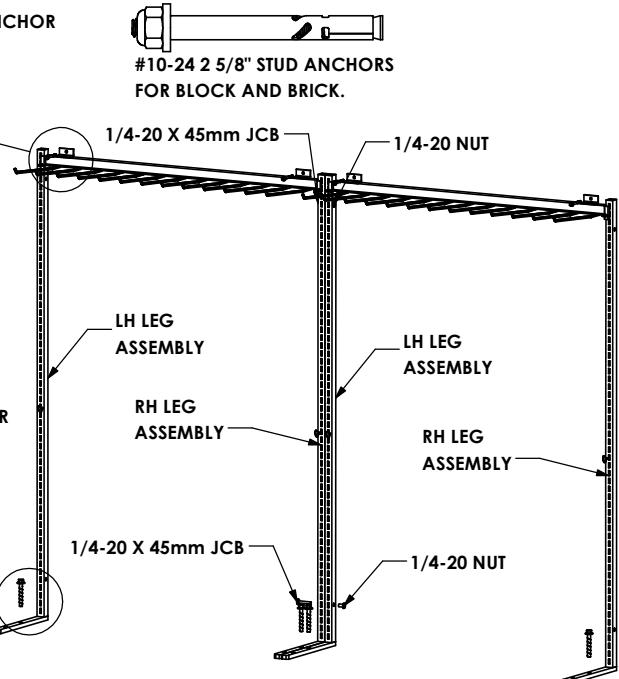


DETAIL B
SCALE 1 : 10

STEP1:


SET THE RH AND LH LEG ASSEMBLIES FOR BOTH SETS SIDE BY SIDE WITH THE 1ST HOOK RACK BARS IN THE DESIRED LOCATION. ATTACH BOTH SETS TOGETHER USING 1/4-20 X 45mm JCB BOLTS AND NUTS AT THE TOP AND BOTTOM . SECURE UNITS TO THE FLOOR WITH PROVIDED 3/8"X3" ANCHOR BOLTS AND TO THE WALL WITH PROVIDED #10-24 2 5/8" STUD ANCHORS FOR BLOCK AND BRICK.




HOOK RACK

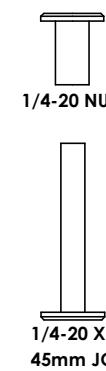

1/4-20 NUT

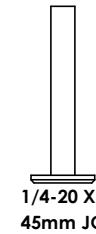


1/4-20 X 45mm JCB

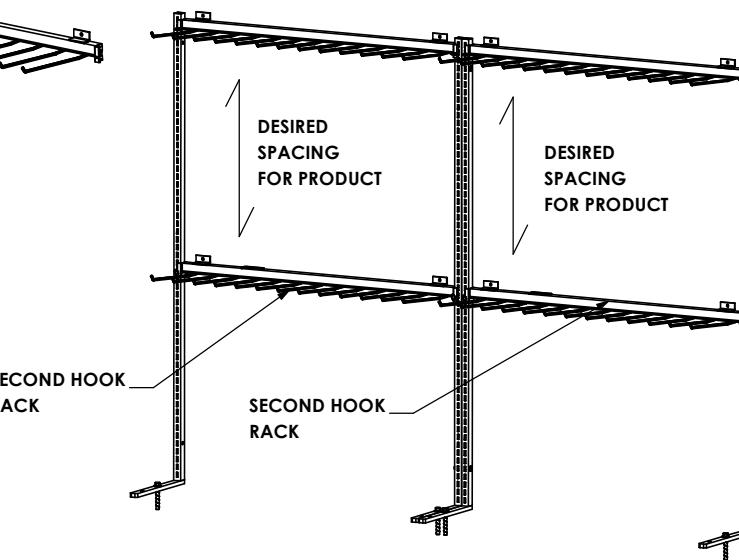


STEP2:


SET THE SECOND HOOK RACK IN THE DESIRED LOCATION ON THE LEG ASSEMBLIES WITH THE NEEDED SPACING.

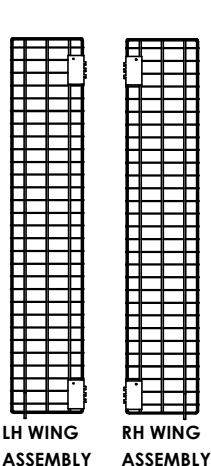


LH WING ASSEMBLY RH WING ASSEMBLY

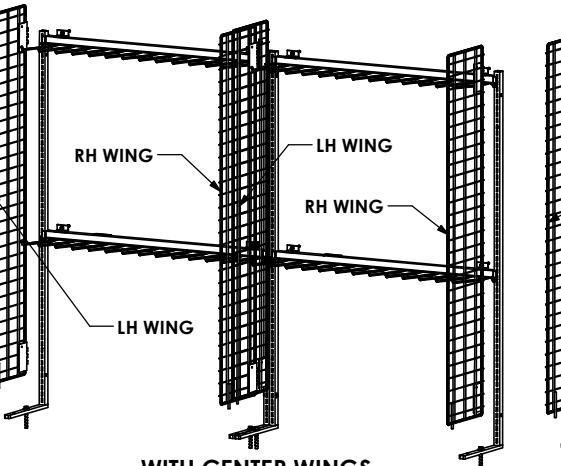

WITH CENTER WINGS

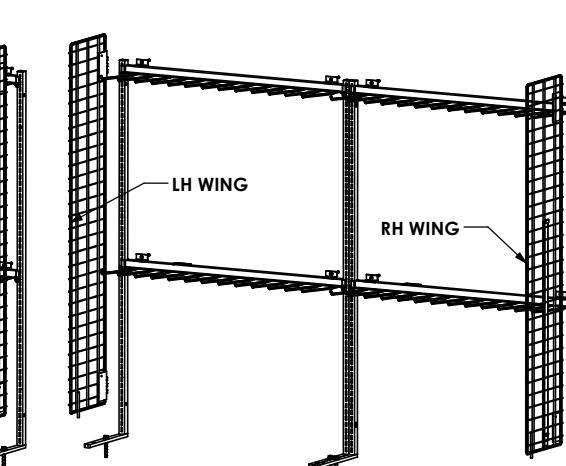


WITHOUT CENTER WINGS


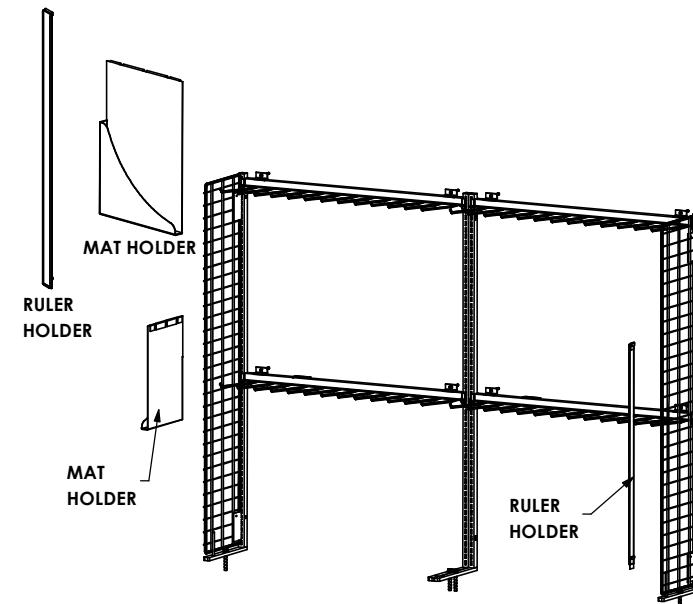


STEP4:


FINISH THE INSTALL BY HANGING THE MAT HOLDER ON THE OUTSIDE OF THE LEFT WING GRID AND RULER HOLDER ON RIGHT SIDE.

ITEM	PART NO	QTY	DESCRIPTION
1	3R-8000391	2	WIPER DISPLAY RACK
2	02-00497	4	1/4-20X1 PNHD PHL BLK
3	02-10004	4	NUT 1/4-20 BLK

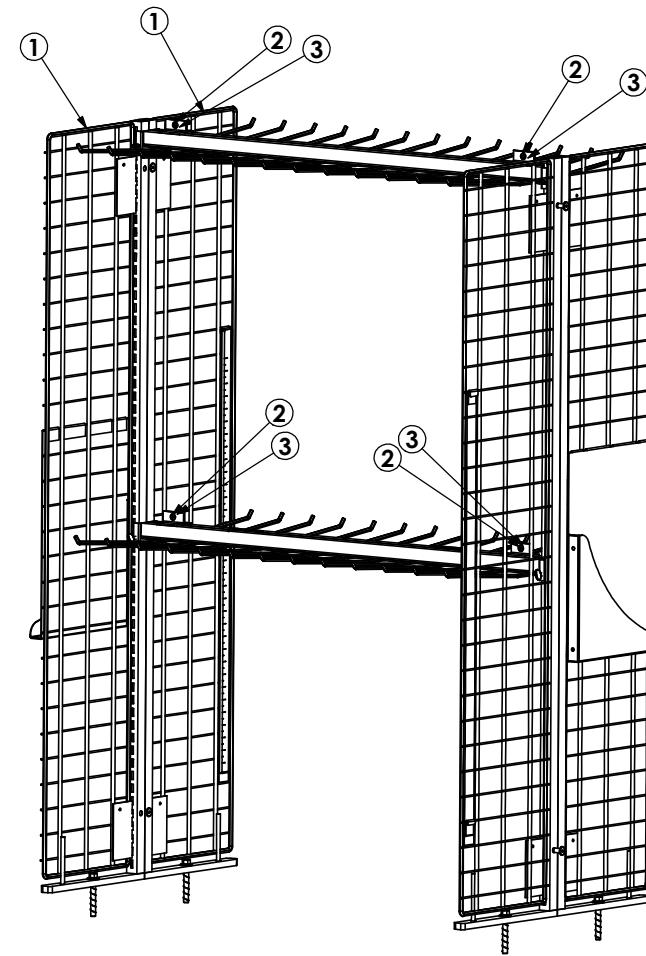

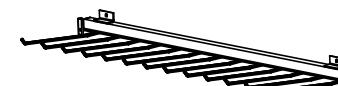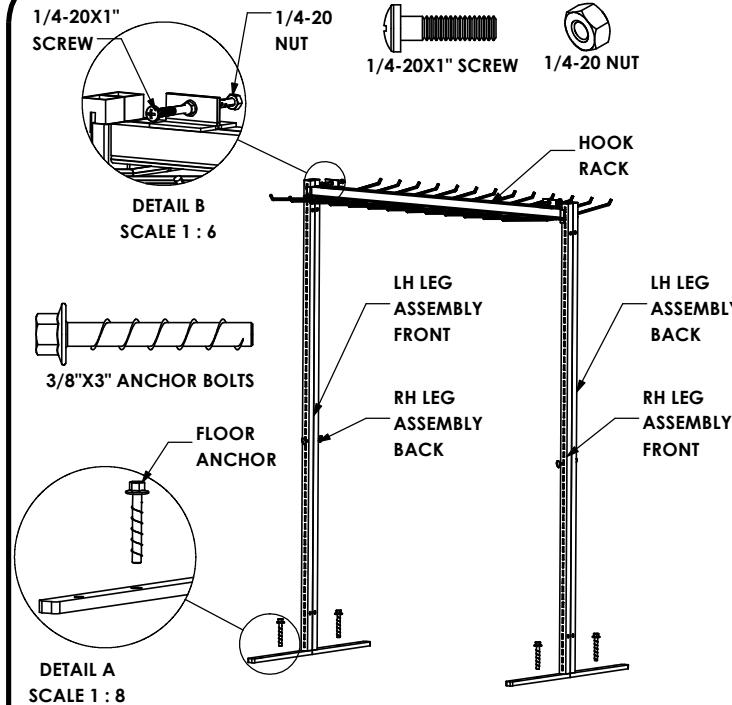


HOOK RACK

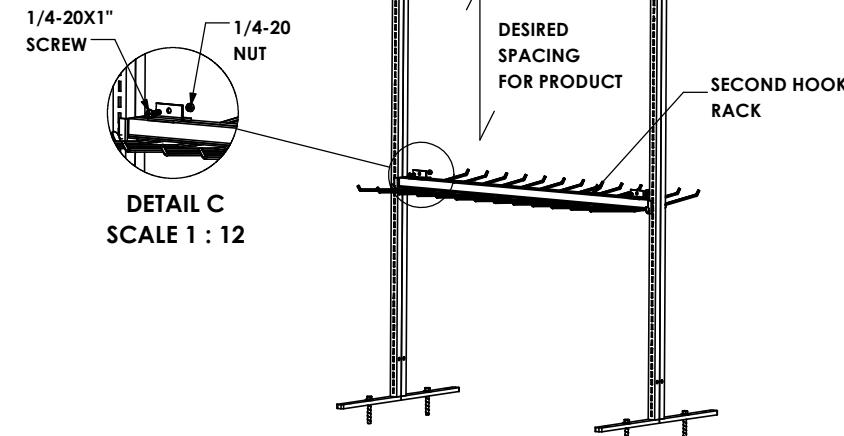

STEP1:

SET THE RH AND LH LEG ASSEMBLIES AND 1ST HOOK RACK BARS BACK TO BACK IN THE DESIRED LOCATION AND SECURE TO THE FLOOR WITH PROVIDED 3/8"X3" ANCHOR BOLTS AND TO EACH OTHER WITH 1/4-20X1" SCREWS AND 1/4-20 NUTS.

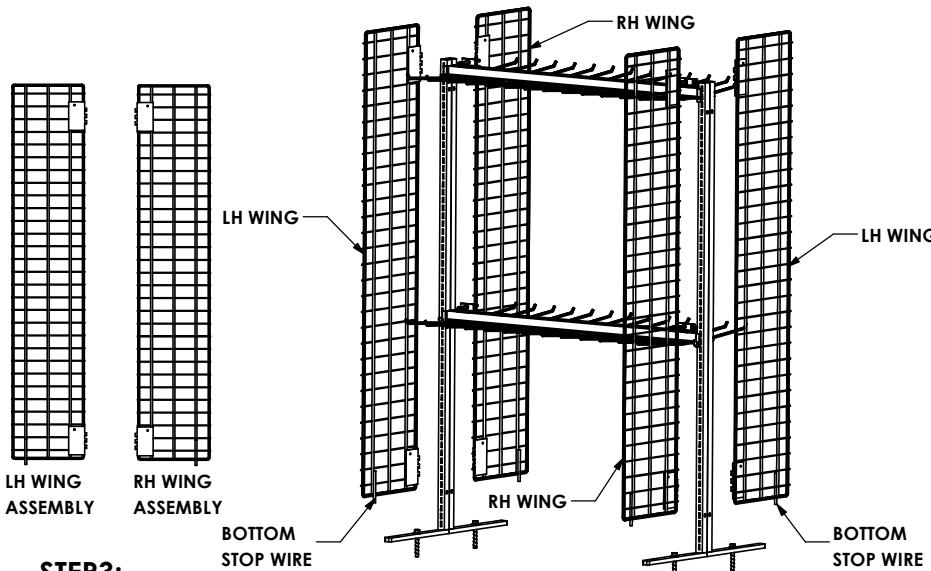


STEP3:

SET THE WING ASSEMBLIES THE LH AND RH WITH THE THIN WIRE GRID TO THE OUTSIDE AND BOTTOM STOP WIRE TO THE INSIDE.

STEP2:

SET THE SECOND HOOK RACKS IN THE DESIRED LOCATION ON THE LEG ASSEMBLIES WITH THE NEEDED SPACING. CONNECT BOTH RACKS TO EACH OTHER WITH 1/4-20X1" SCREWS AND 1/4-20 NUTS.

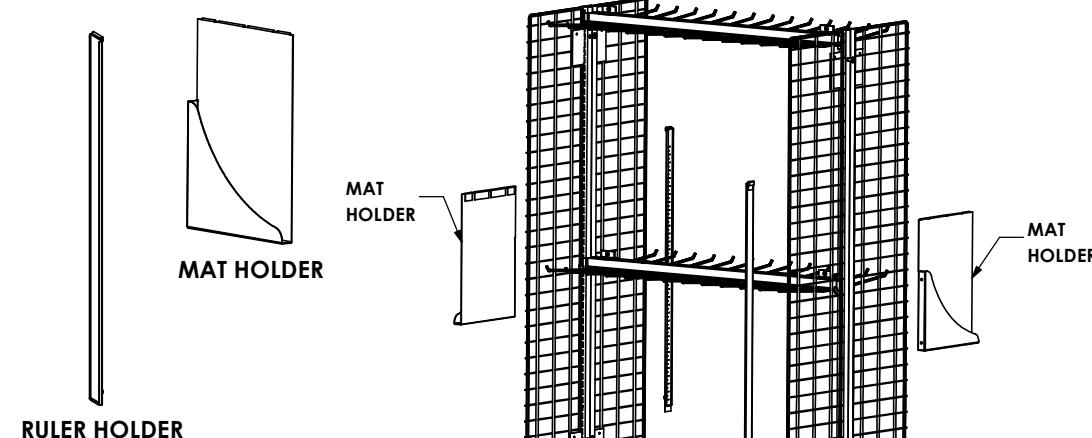

STEP4:

FINISH THE INSTALL BY HANGING THE MAT HOLDERS ON THE OUTSIDE OF THE LEFT WING GRIDS FRONT AND BACK AND THE RULER HOLDER WITH RULER GRAPHIC ON THE OPPOSITE GRID..