


MINIMUM SOFTWARE VERSION LEVEL IS REQUIRED:
BARTEC 400PRO: 64.1.0.2 | BARTEC 450PRO: 4.0.8.2


1

Select
NEW TPMS SERVICE

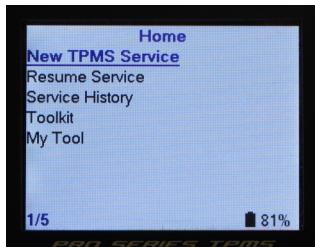

2

Choose
Select by MMY
& select your
vehicle

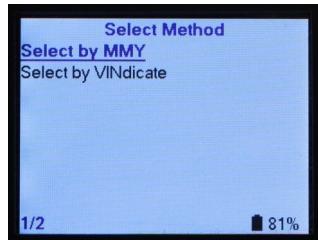

3

Select
appropriate
Relearn: option

Once MMY is selected,
this screen will display
relearn options available
for that vehicle



4

Install sensors & pressurize tire



5

Scan sensors to
make them
compatible with
that vehicle



6

COMPLETE THE RELEARN - YOU MAY NOTICE THAT THE
TOOL LOOKS FOR AN OE SENSOR FIRST, THEN TRANSITIONS TO
SCANNING FOR THE REDI-SENSOR. THIS IS NORMAL.



**THERE IS NO LONGER ANY NEED TO UNLOCK CLAMP-IN REDI-SENSORS. OUT
OF THE BOX, YOU CAN SCAN THEM UNDER ALL COVERED APPLICATIONS.**