


# DO NOT STAND IN THE BLAST ZONE!

# CAUTION




**Critical  
to Safety**

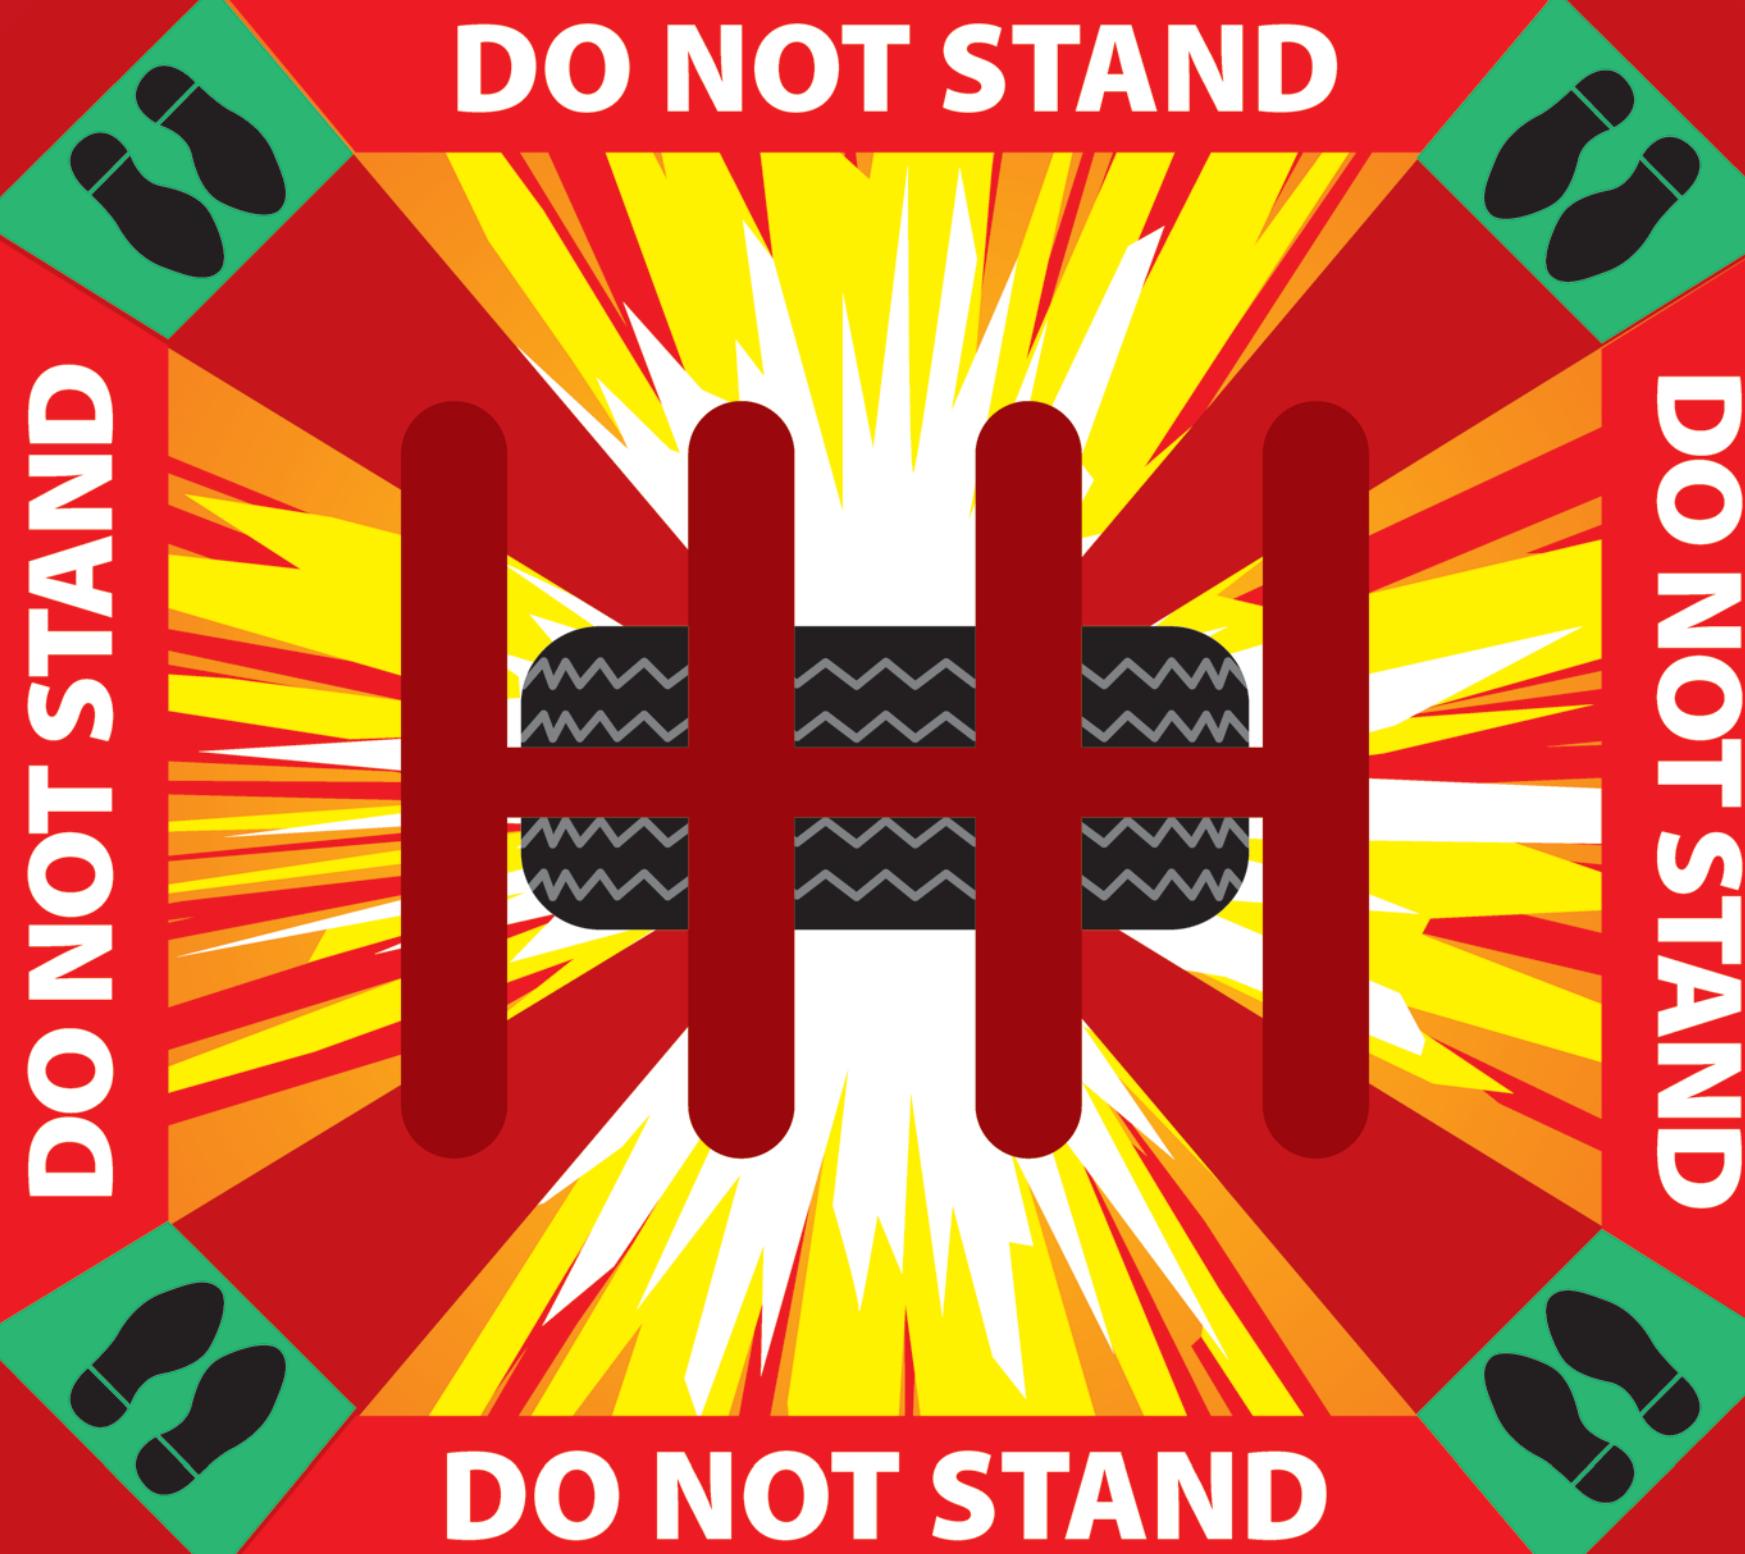

## Never exceed 125 PSI!

- Do NOT reach into cage during inflation
- Do NOT stand in the blast zone
- ALWAYS wear proper eye protection
- Keep others out of the blast zone

### DANGER – Steel Sidewall Tires

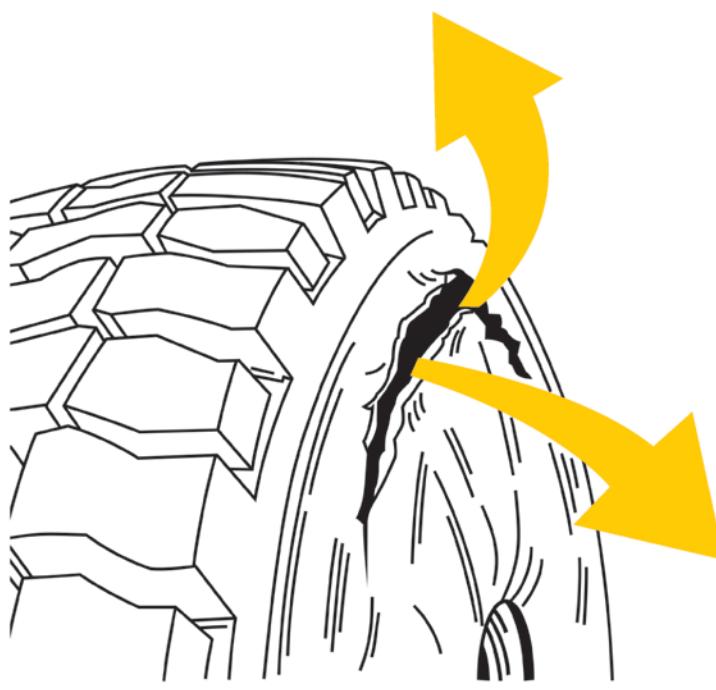

When working on USED or REPAIRED steel sidewall tires:

- 1) Dismount and inspect before inflating or dunking.
- 2) Mount and seal, then place in inflation cage. Use Autoflate to inflate to 20 PSI.
- 3) Disconnect hose and roll tire out of inflation cage to inspect sidewalls for: distortions, ripples, bubbles, or popping noises indicative of steel cords breaking.
- 4) Place back in inflation cage and use Autoflate to inflate to 80 PSI.
- 5) Switch to MAST air gauge if required operating pressure exceeds 80 PSI.
- 6) Inspect sidewalls a second time checking for distortions, ripples, bubbles, or popping noises.

### Do NOT Inflate or Service



22.5 and larger .5 size fitments



Bolt  
Together  
Wheels



Split Rims



Plastic Wheels



Customer  
Portable  
Air Tanks